# New Error Code System Typical Troubleshooting Cases

Technical Support Department

#### **Contents**

Create a
beautiful life for
human being
Typical Troubleshooting Cases


**Current Error Codes** 


P4

Operation lamp	Timer lamp	Code	Meaning of Troubles			
☆ 1 time	Х	E0	Indoor unit EEPROM parameter error			
☆ 2 times	Х	E1	ndoor / outdoor units communication error			
☆ 3 times	Х	E2	ero-crossing signal detection error (Not available for DC indoor fan motor)			
☆ 4 times	Х	E3	Indoor fan speed has been out of control			
☆ 5 times	Х	E4	Indoor room temperature sensor T1 open circuit or short circuit			
☆ 6 times	Х	E5	Evaporator coil temperature sensor T2 open circuit or short circuit			
☆ 7 times	Х	EC	Refrigerant leakage detection			
☆ 8 times	Х	EE	Water-level alarm malfunction			
☆ 9 times	Х	E6/Eb	Communication error between indoor PCB and display PCB			
☆ 1 times	0	F0	Over-current protection			
☆ 2 times	0	F1	Outdoor ambient temperature sensor T4 open circuit or short circuit			
☆ 3 times	0	F2	Condenser coil temperature sensor T3 open circuit or short circuit			
☆ 4 times	0	F3	Compressor discharge temperature sensor T5 open circuit or short circuit			
☆ 5 times	0	F4	Outdoor unit EEPROM parameter error			
☆ 6 times	0	F5	Outdoor fan speed has been out of control (DC fan motor only)			
☆ 7 times	0	F6	Indoor coil outlet pipe sensor (T2B) (Located on outdoor unit low pressure valve)			
☆ 1 times	☆	P0	IPM malfunction or IGBT over-strong current protection			
☆ 2 times	☆	P1	DC voltage between P&N out of range			
☆ 3 times	☆	P2	Hi temperature protection of compressor top or IPM			
☆ 5 times	☆	P4	Inverter compressor drive error			
☆ 6 times	☆	р5	Operation mode conflict for multi system			
☆ 7 times	☆	p6	Low pressure protection			
		р7	AP mode is active but there is no WIFI kit installed			
		X: OFF	O: On ☆: Flashes in 2Hz			


Consist of New Error Codes


P4 -> PC 04

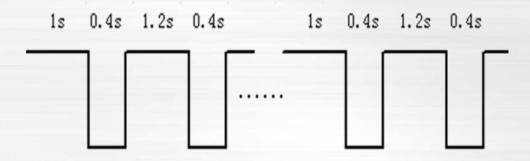

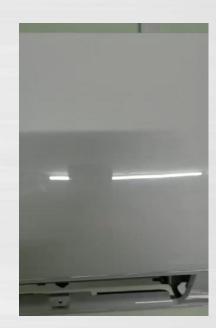

Consist of New Error Codes

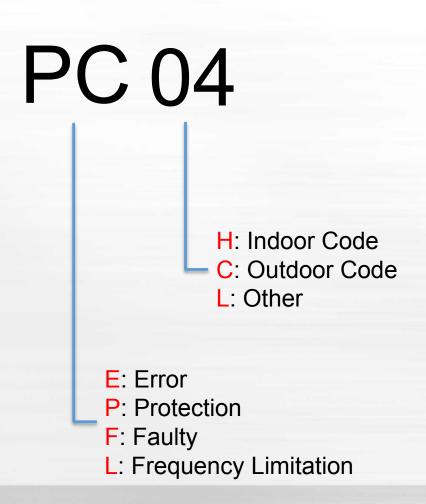

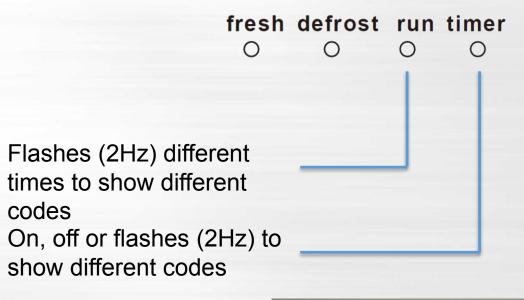



**New Error Codes** 


PC04

Operation lamp	Timer lamp	Code	Meaning of Troubles			
☆ 1 time	Х	EH 00	ndoor unit EEPROM parameter error			
☆ 2 times	Х	EL 01	Indoor / outdoor units communication error			
☆ 3 times	X	EH 02	Zero-crossing signal detection error (Not available for DC indoor fan motor)			
☆ 4 times	X	EH 03	Indoor fan speed has been out of control			
☆ 5 times	Х	EH 60	Indoor room temperature sensor T1 open circuit or short circuit			
☆ 6 times	Х	EH 61	Evaporator coil temperature sensor T2 open circuit or short circuit			
☆ 8 times	Х	EL OC	Refrigerant leakage detection			
☆ 9 times	X	EH 0b	Communication error between indoor PCB and display PCB			
☆ 1 times	☆	PC 08	Over-current protection			
☆ 5 times	Х	EC 53	Outdoor ambient temperature sensor T4 open circuit or short circuit			
☆ 5 times	Х	EC 52	Condenser coil temperature sensor T3 open circuit or short circuit			
☆ 5 times	Х	EC 54	Compressor discharge temperature sensor T5 open circuit or short circuit			
☆ 5 times	Х	EC 51	Outdoor unit EEPROM parameter error			
☆ 5 times	Х	EC56	ndoor coil outlet pipe sensor (T2B) (Located on outdoor unit low pressure valve)			
☆ 12 times	Х	EC 07	Outdoor fan speed has been out of control (DC fan motor only)			
☆ 7 times	☆	PC 00	IPM malfunction or IGBT over-strong current protection			
☆ 2 times	☆	PC 01	DC voltage between P&N out of range			
☆ 3 times	☆	PC 02	Hi temperature protection of compressor top or IPM			
☆ 5 times	☆	PC 04	Inverter compressor drive error			
☆ 7 times	☆	PC32	Low pressure protection			
		FH OP	AP mode is active but there is no WIFI kit installed			
		EH0E	Water-level alarm malfunction			
☆ 1 times	0		Operation mode conflict for multi system			
X: OFF O: On ☆: Flashes in 2Hz						

- Communication Error between indoor and outdoor unit
- E1 (ELO1)

Error Code	E1 (EL01)
Malfunction decision conditions	Indoor unit does not receive the feedback from outdoor unit during 110 seconds and this condition happens four times continuously.
Possible causes	<ul> <li>Wiring mistake</li> <li>Faulty indoor or outdoor PCB</li> <li>Faulty EEV</li> <li>Faulty reactor</li> </ul>


- Communication Error between indoor and outdoor unit
- E1 (EL 01)

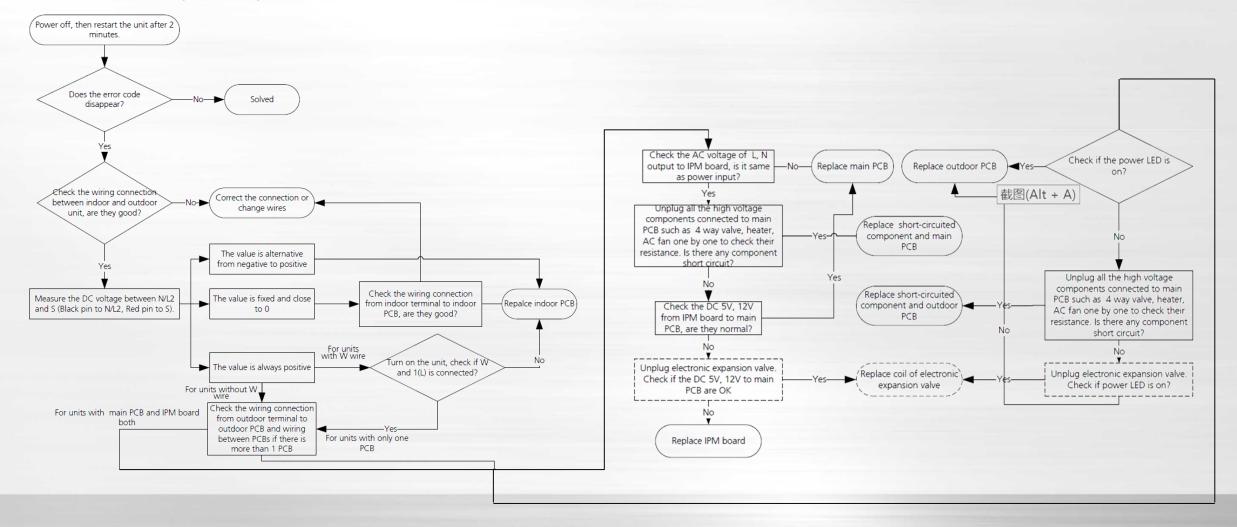


Communication Error between indoor and outdoor unit

• E1 (EL 01)

First, check that the connections are integrated and correct.

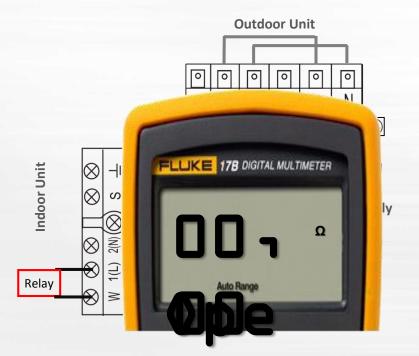




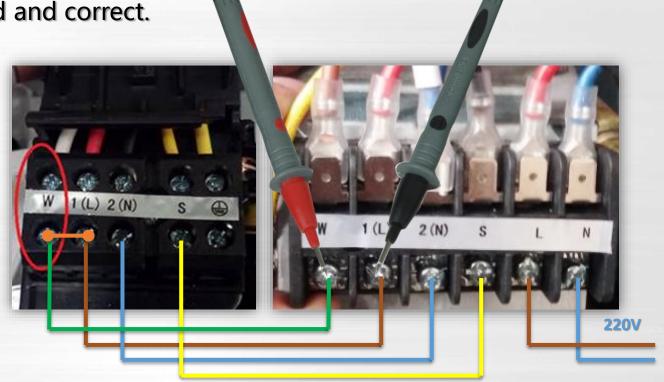


Note: sometimes, it is necessary to test with a temporary cable, because if the cable is bitten, it is likely that the multi-me er indicates continuity by some filament that has been left, but it is not enough for the cable to communicate correctly.

- Communication Error between indoor and outdoor unit
- E1 (EL 01) Frame of Indoor PCB

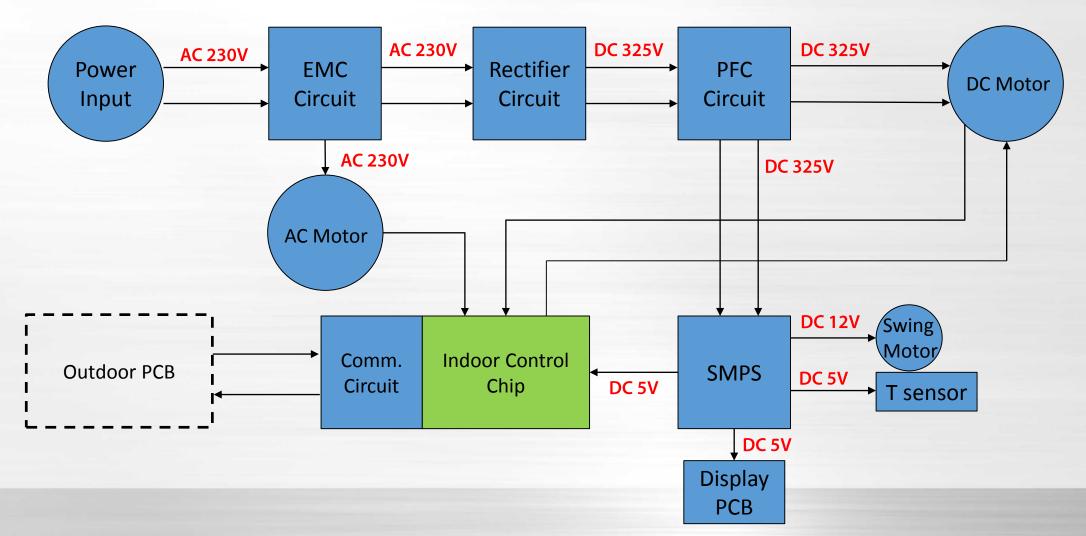

- Communication Error between indoor and outdoor unit
- E1 (EL 01)

Port	Description	Parameter	Remark
CN3	Power output for DC Fan		
CN8	Power output for swing motor of louver	12V/DC	
CN20	Power output for swing motor of vertical louver	12V/DC	Reserved
CN7	Power output for room temperature sensor T1	5V/DC	
CN6	Power output for evaporator temperature sensor T2	5V/DC	
CN10A	Power output and communication for display board	5V/DC	
CN225	Power output for ionizer or plasma	230V/AC	Reserved
CN51	Port for 12V output	12V/DC	

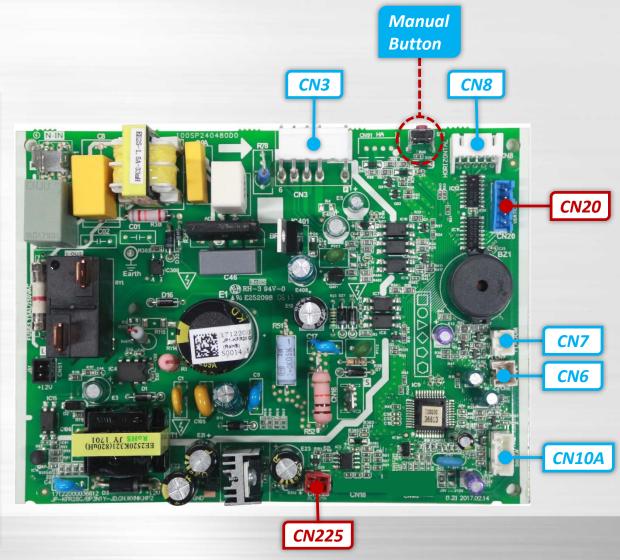


- Communication Error between indoor and outdoor unit
- E1 (EL 01)


Then, perform voltage measurements between 2 and 3. (it is recommended to place the multi-meter on a 100V scale)

The values will move alternatively from negative value to positive value.

If the voltage is only positive value, it indicates a problem is in the outdoor PCB and must be replaced.

If the voltage is fixed and very close to zero, it indicates that the problem may be in the cable or on the indoor PCB.

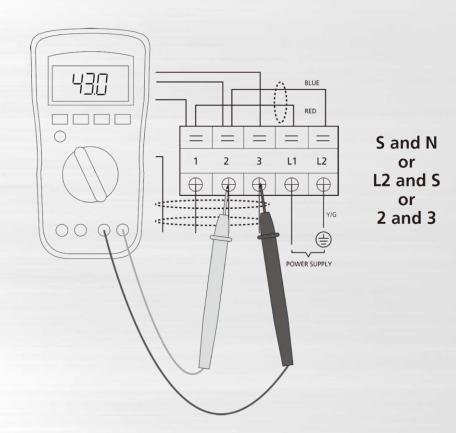

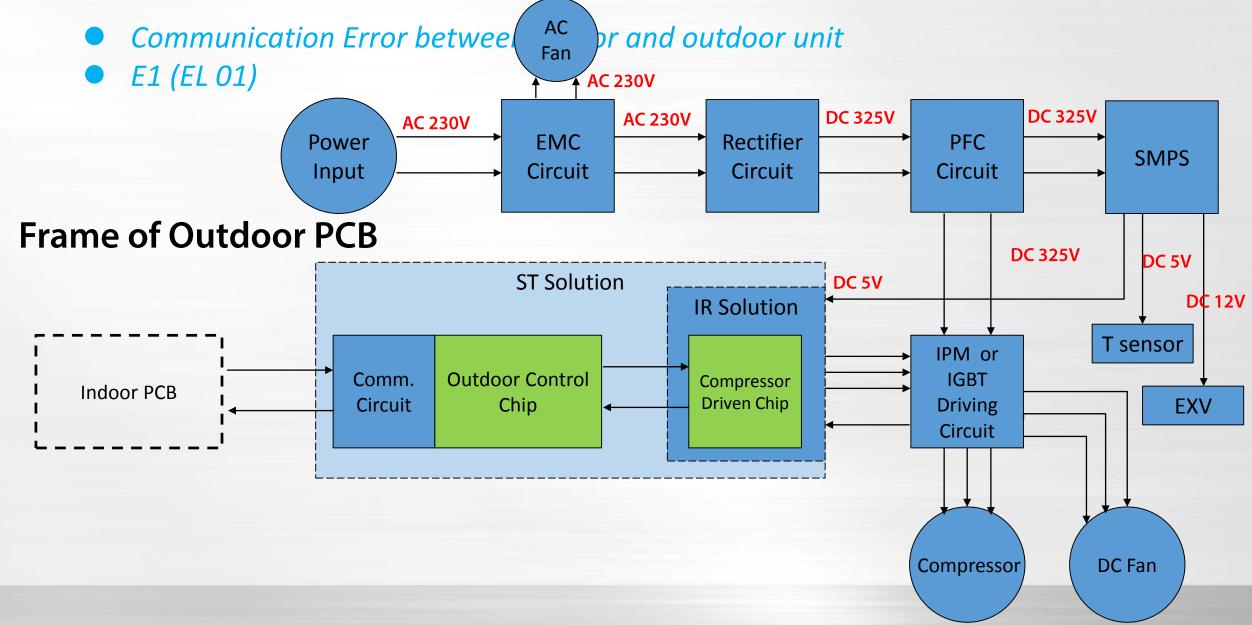



Communication Error between indoor and outdoor unit

9K/12

<b>[1</b> ]		01)
	LL	OII

Port	Description	Parameter
CN3	Port for earth wire	
CN1	Port for neutral wire	
CN2	Port for live wire	
CN16	Port for communication cable S	
CN17	Power output for compressor heater	230V/AC
CN60	Power output for 4-way valve	230V/AC
CN15	Power output for chassis heater	230V/AC
CN25	Power output for AC fan	230V/AC
CN22	Power output for condenser (T3), ambient (T4) and discharge (Tp) temperature sensors	5V/DC
CN31	Power output for EEV	12V/DC
CN7	Port for DC fan	0-200V/AC
CN6	Port for test board	5V/DC
CN50	Port for Compressor	0-200V/AC

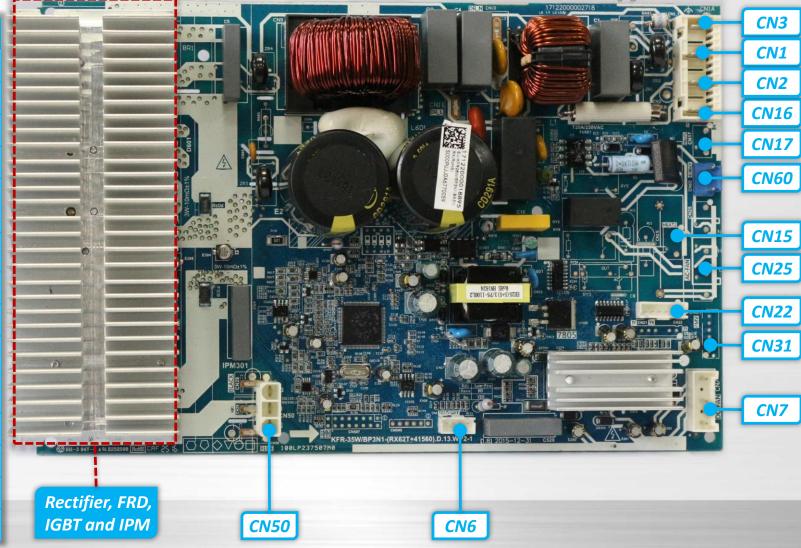

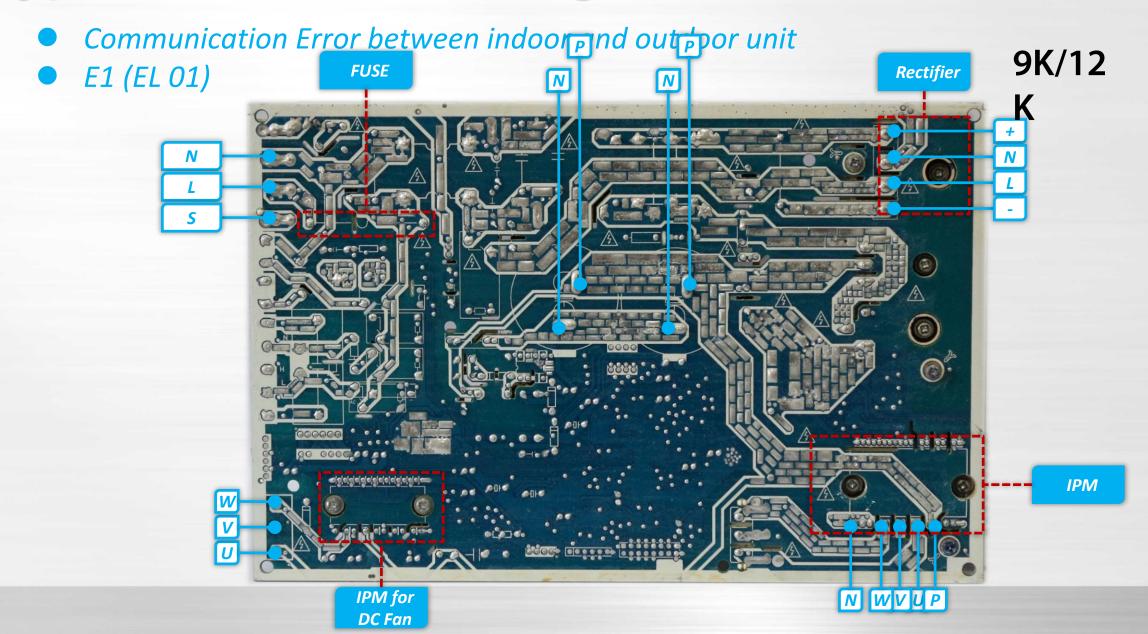


Communication Error between indoor and outdoor unit

• E1 (EL 01)

#### 1. Check AC input



Check AC voltage value between L and N. If the measured value is around 230V, then go to next step.

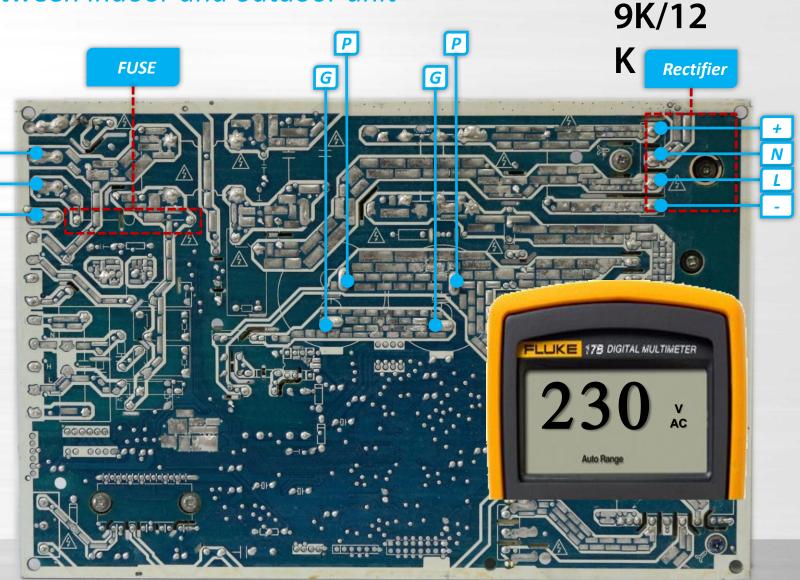



Communication Error between indoor and outdoor unit

• E1 (EL 01)

2. Check Rectifier's AC input

Check Rectifier's AC input voltage value between L and N. If the measured value is around 230V, it means the fuse, the inductor and the NTC are ok, then go to next step.

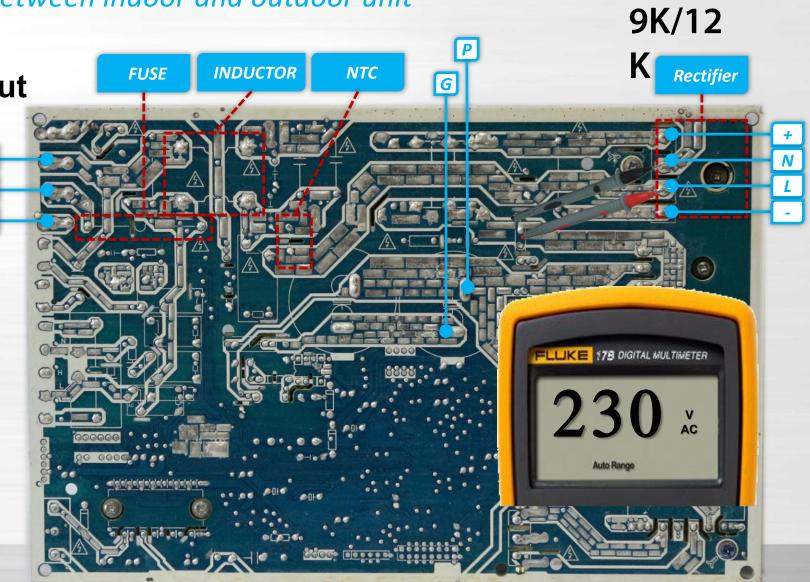

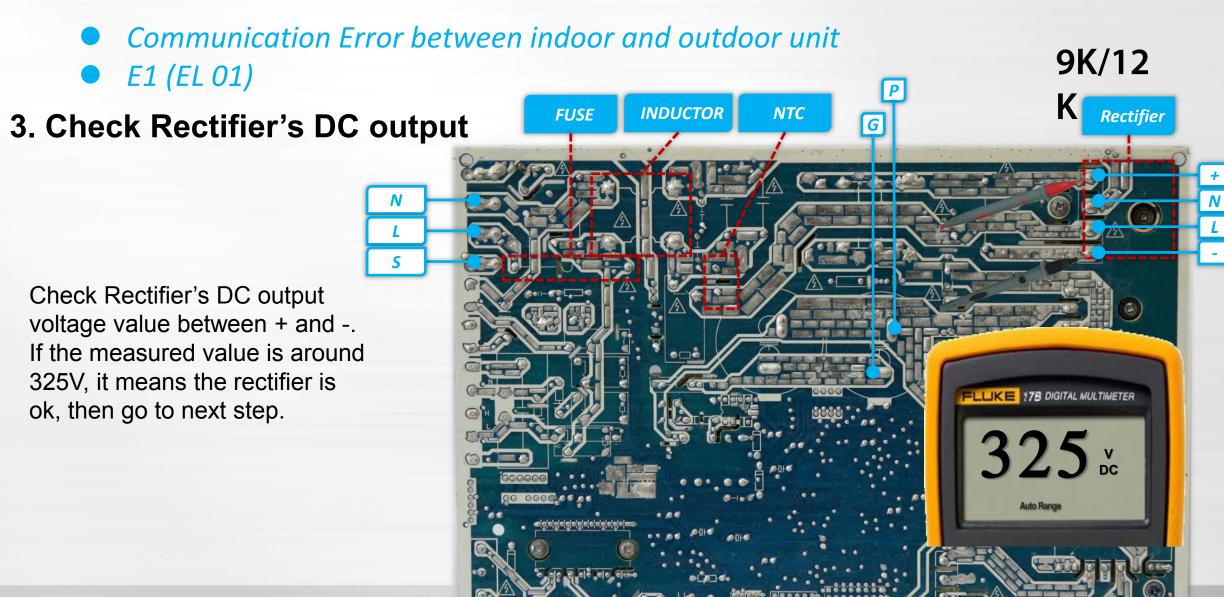


Communication Error between indoor and outdoor unit

N

• E1 (EL 01)

#### 4. Check PG Voltage

Check PG's DC voltage and it should higher than 300V, it means the capacitor, the PFC inductor and the FRD are ok, then go to next step.

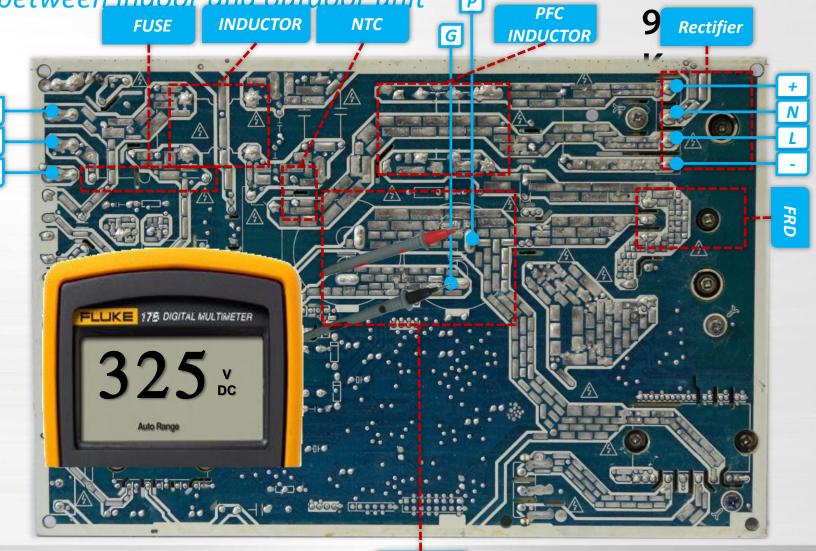

N


Communication Error between indoor and outdoor unit


• E1 (EL 01)


#### 5. Check SMPS Voltage

Check SMPS DC voltage and it supply 15VDC, 12VDC and 5VDC. If 3 voltage is correct, it means the SMPS is ok, then may be the MCU failure.



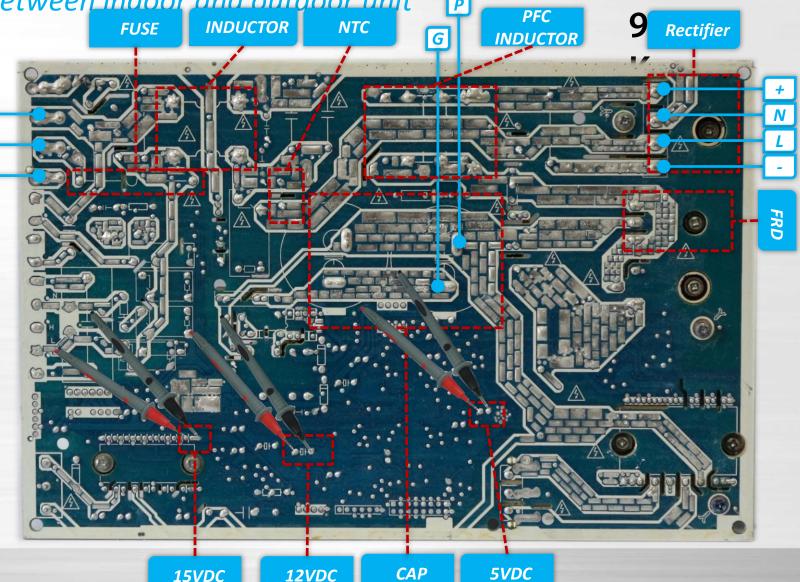

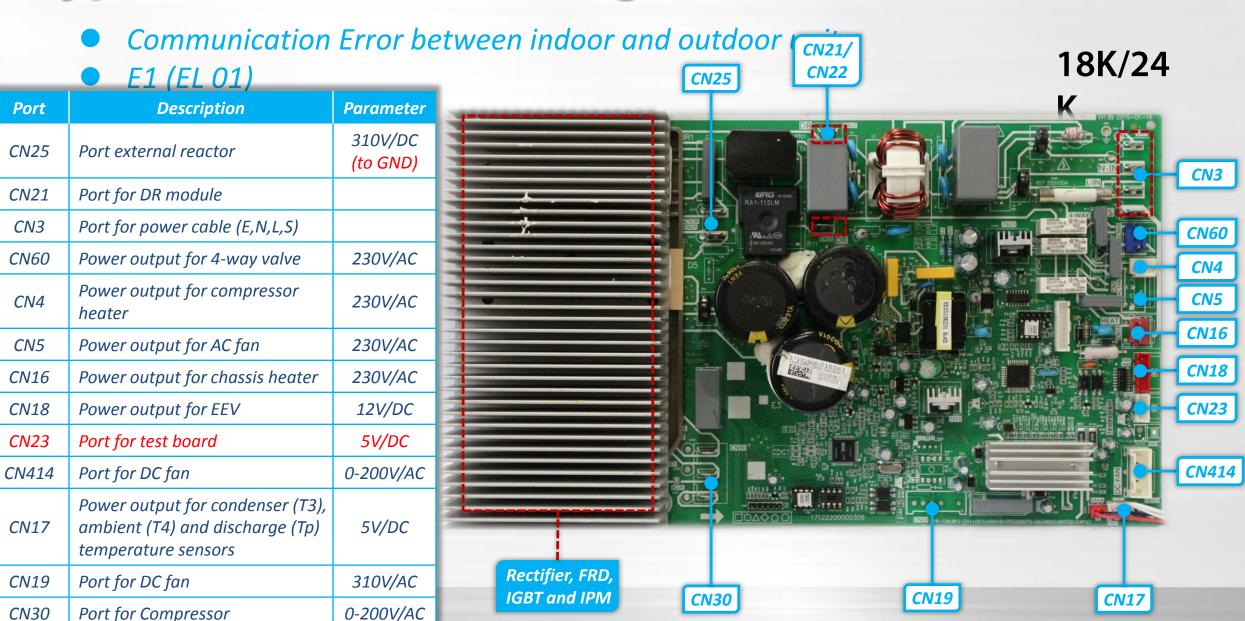

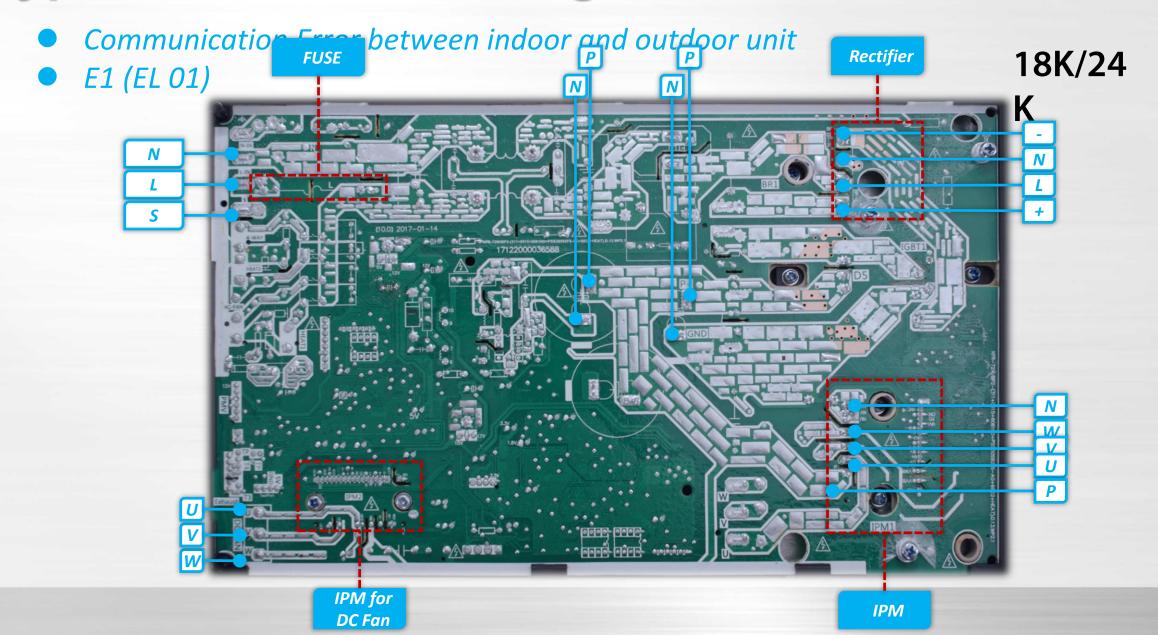


- Communication Error between indoor and outdoor unit
- E1 (EL 01)



18K/24 K

Communication Error between indoor and outdoor unit

24K/30K

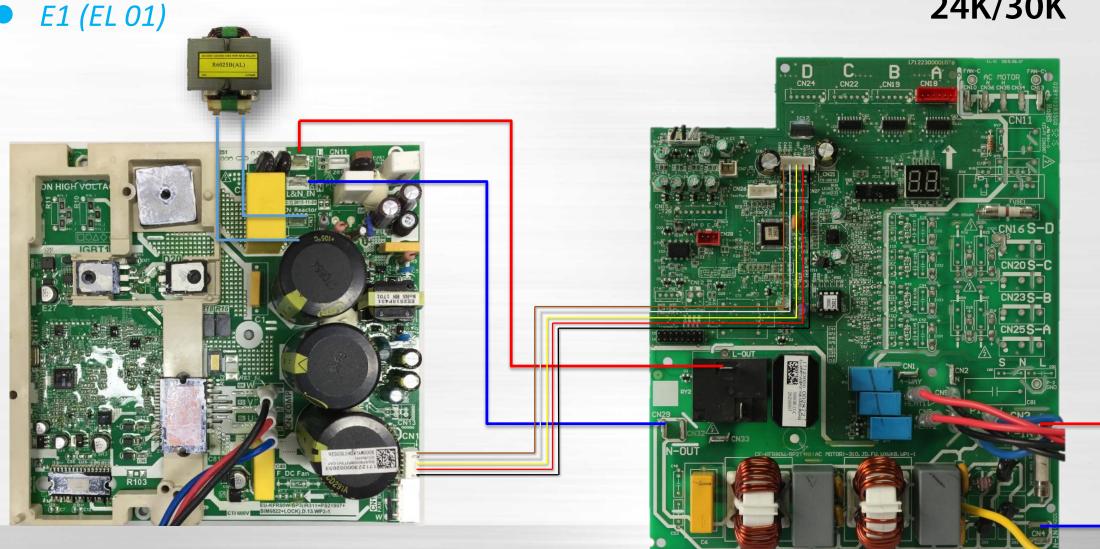

Communication Error between indoor and outage


• E1 (EL 01)

Port	Description	Parameter
CN14	Output for DC fan	
CN1	Communication port with main board	5V, 12V/DC
CN2 CN3	Connection ports for reactor	320V/DC
CN5	N port for AC input	5V/DC
CN4	L port for AC input	230V/AC

#### **IPM Board**

**Driving Chip** 

IPM for DC Fan

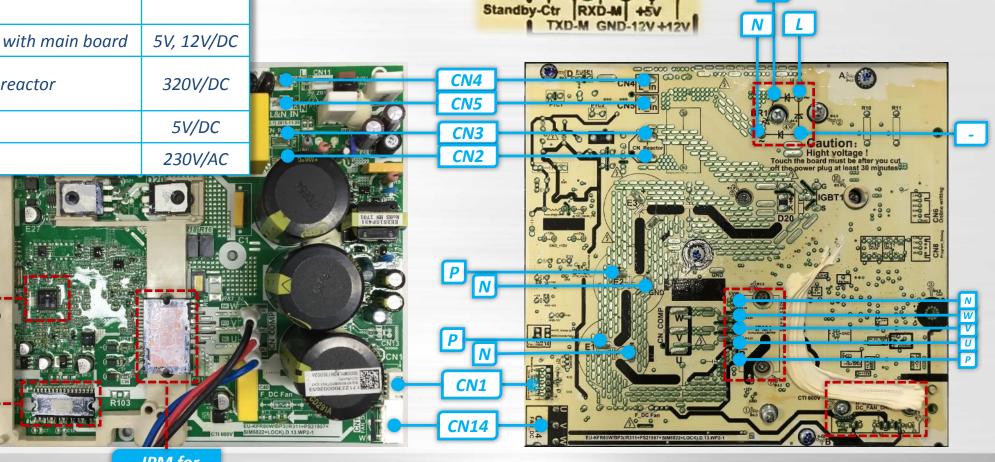


24K/30K

IPM for Compressor

Communication Error between indoor and outdoor unit

• E1 (EL 01)

36K/42K (1Ph)

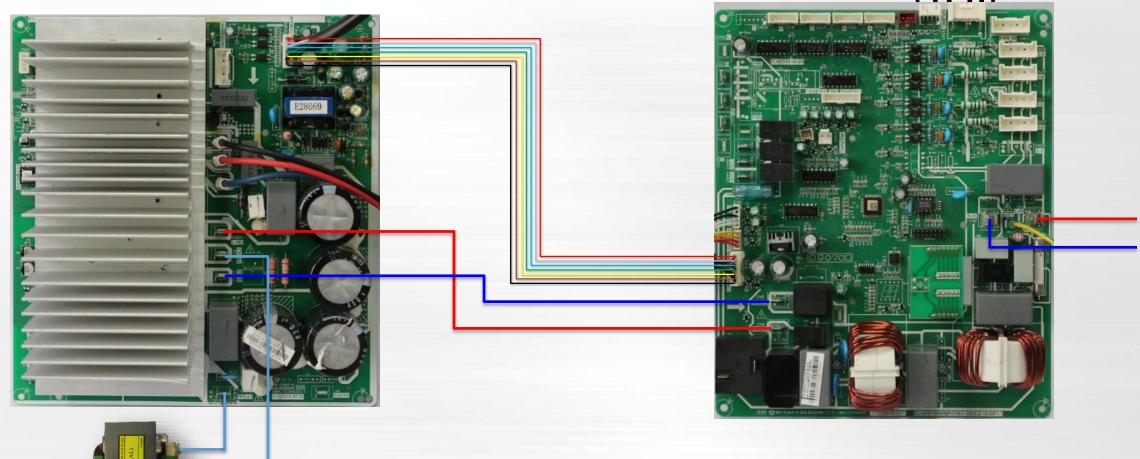

uvw -

CN54 CN51 CN53


**CN52** 

Communication Error between indoor and outdoor unit

E1 (EL 01) **Port Description Parameter CN19** Output for DC fan Communication port with main board **CN55** 5V, 12V/DC CN51 Connection ports for reactor 320V/DC CN52 **CN53** N port for AC input 5V/DC **CN54** L port for AC input 230V/AC Output for compressor UVW

36K/42K (1Ph)

**IPM** for

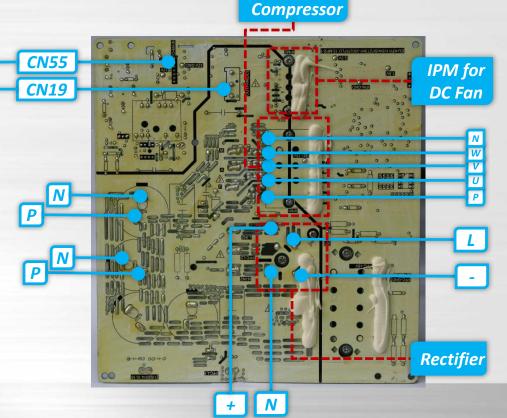


- Communication Error between indoor and outdoor unit
- E1 (EL 01)

The cases about the wiring cause the E1






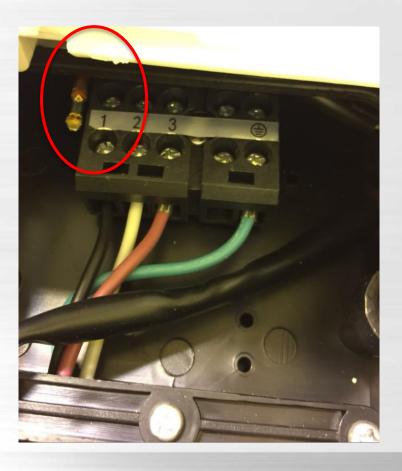

- Communication Error between indoor and outdoor unit
- E1 (EL 01)


Other cases cause the E1

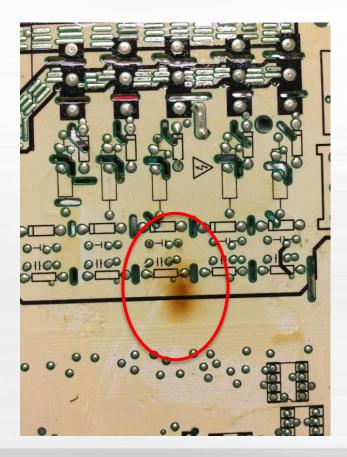




- Inverter compressor drive error
- P4 (PC 04)

Error Code	P4(DP) P40/P41/P42/P43/P44/P45/P46/ P49(DB)
Malfunction decision conditions	An abnormal inverter compressor drive is detected by a special detection circuit, including communication signal detection, voltage detection, compressor rotation speed signal detection and so on.
Possible causes	<ul> <li>Wiring mistake</li> <li>IPM malfunction</li> <li>Faulty outdoor fan motor</li> <li>Compressor malfunction</li> <li>Faulty outdoor PCB</li> <li>Surge</li> <li>System blockage</li> </ul>

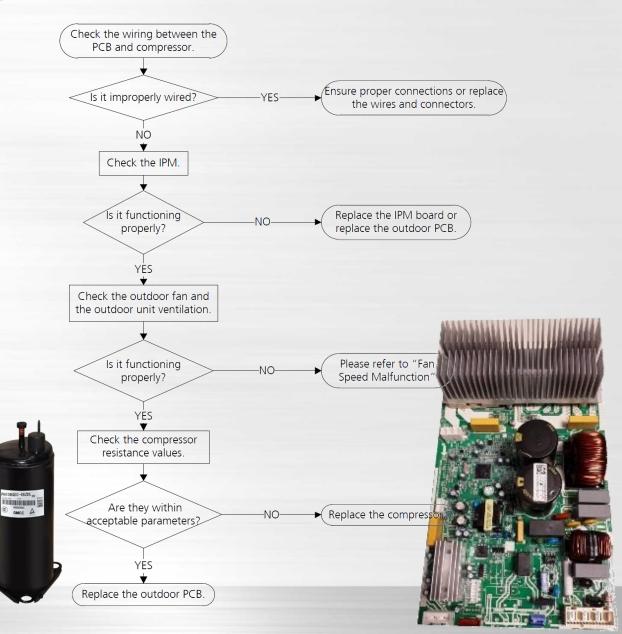

- Inverter compressor drive error
- P4 (PC 04)

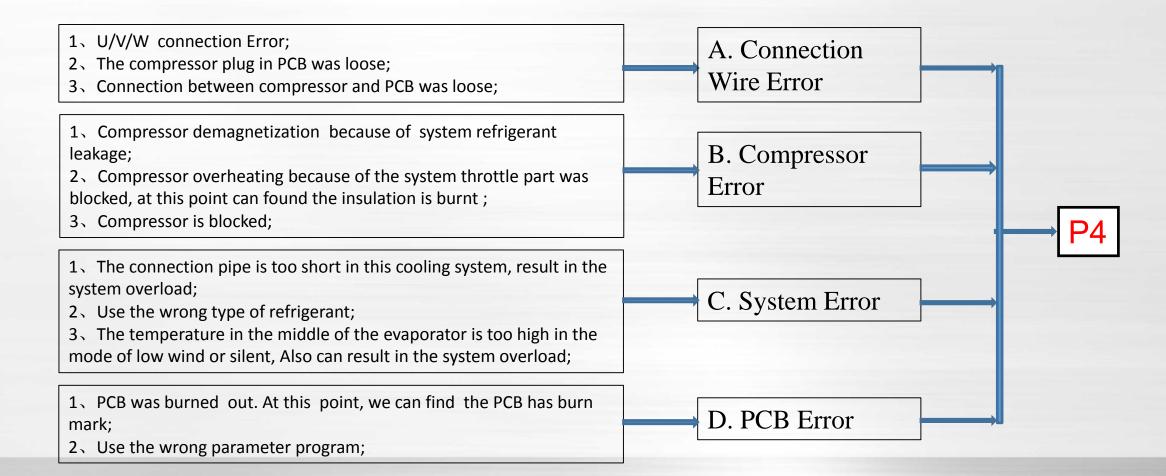

- Inverter compressor drive error
- P4 (DP Error Code)
- P40/P41/P42/P43/P44/P45/P46/P49 (DB Error Code)

Error Code	Explanation	Damaged Part	
P40	Communication error between main control chip and drive chip	Outdoor PCB or IPM board	
P41	Error of current sampling circuit of compressor	Outdoor PCB or IPM board	
P42	Error of compressor start up	Compressor	
P43	Lack phase protection	Connection cable of compressor	
P44	Zero speed protection	Outdoor PCB or IPM board, or compressor	
P45	Synchronization error between 341 chip and PWM	Outdoor PCB or IPM board	
P46	Compressor speed out of control	Outdoor PCB or IPM board, or compressor	
P49 Error of over current of compressor		Outdoor PCB or IPM board, compressor or refrigeration system	

ASK SET

UP DOWN
Inverter Air-conditioner Detector

JC-01

BOM Code: 17222000A55250



BOM Code: 17222000A55927

- Inverter compressor drive error
- P4 (PC 04)

#### **Causes of Compressor Stop**

Code	Reasons of compressor stop	Code	Reasons of compressor stop
1	Frequency limit caused by current	24	IPM overcurrent protection (P0)
2	Frequency limit caused by T2 in cooling	25	Compressor lack of phase (P43)
3	Frequency limit caused by T2 in heating	26	Compressor malfunction
4	Set temperature reached	27	Low voltage protection of compressor driven chip
5	Frequency limit caused by T4	28	DC Fan current protection (F5)
6	Defrosting	29	DC Fan lack of phase (F5)
7	Mode switching	30	DC Fan zero speed protection (F5)
9	High discharge temperature protection	31	PFC module protection
10	High evaporator coil temperature T2 protection	32	High voltage protection of compressor driven chip
11	Evaporator low temperature T2 protection	33	Compressor Zero speed malfunction (P44)
12	Condenser high temperature T3 protection	34	Compressor PWM malfunction (P45)
13	Low indoor room temperature protection in drying mode	35	Compressor MCE malfunction (P12)
14	Low ambient temperature protection	36	Compressor overcurrent protection (P49)
15	Refrigerant leakage detection (EC)	37	Compressor EEPROM malfunction
16	Communication malfunction between indoor and outdoor units (E1)	38	Compressor start-up malfunction (P42)
17	Communication error between outdoor main chip and compressor driven chip (P40)	39	Compressor speed is out of control (P46)
18	AC power input voltage protection	40	Low pressure protection
19	Top temperature protection of compressor (P2)	41	High pressure protection
20	Outdoor EEPROM Malfunction (F4)	42	PFC module malfunction
21	Indoor fan speed malfunction (E3)	49	Shutdown stop
22	Temperature sensor open or short circuit (E4/E5/F1/F2/F3)	50	Electrical disconnect
23	Overcurrent protection (F0)	51	DR stop

- Inverter compressor drive error
- P4 (PC 04)




In "Parameter Checking" mode, the screen will display the code name for 2 seconds, and then the information for 25 seconds. The meaning of codes are as right table shows. If there is no any operation in this 27s or other button is pressed, the unit will quit this mode.


#### Parameter Checking operation

Displaying code	Meaning	
T1	Room temperature	
T2	Indoor coil temperature	
Т3	Outdoor coil temperature	
T4	Ambient temperature	
Tb	Outlet temperature of indoor coil	
TP	Discharge temperature	
TH	Suction temperature	
FT	Targeted Frequency	
Fr	Actual Frequency	
IF .	Indoor fan speed	
OF	Outdoor fan speed	
LA	EXV opening steps	
СТ	Compressor continuous running time	
ST	Causes of compressor stop.	
A0, A1, 0, 1, 2,		
3, 4, 5, 6, L, A,	Reserved	
U, T		

- Inverter compressor drive error
- P4 (PC 04)

Step 1. Confirm whether the wiring of outdoor unit power, main PCB and IPM board are correct or not, and whether the connecting is loose.

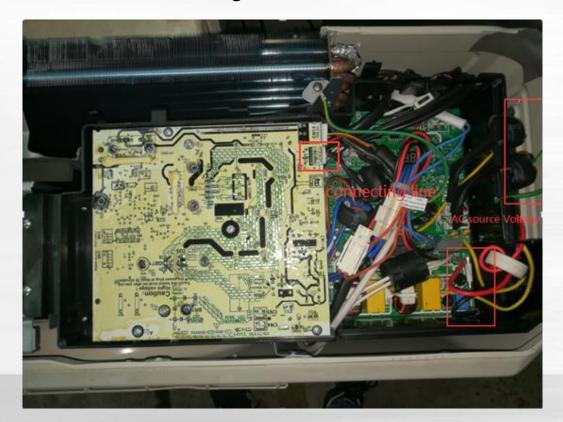


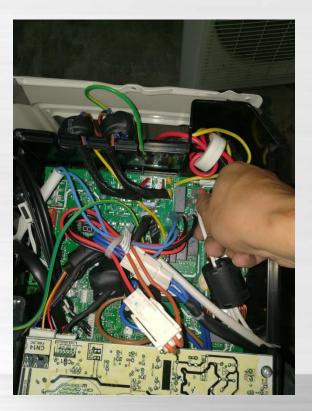

- Inverter compressor drive error
- P4 (PC 04)

Step 1. Confirm whether the wiring of outdoor unit power, main PCB and IPM board are correct or not, and whether the connecting is loose.



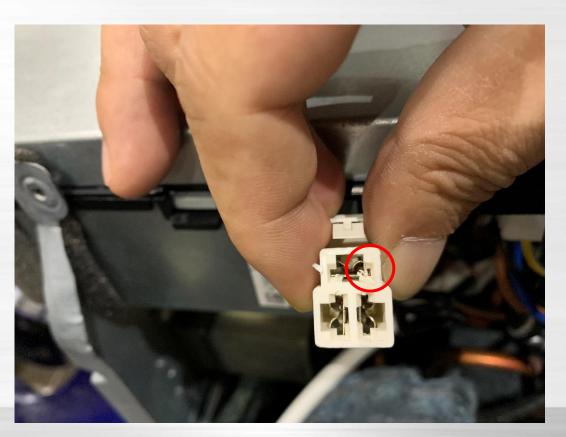

- Inverter compressor drive error
- P4 (PC 04)

Step 2. Please record the status of the red light and green light of the module board when confirming the fault.




- Inverter compressor drive error
- P4 (PC 04)

Step 3. Measure the bus voltage at startup and failure. After starting up the compressor, the bus voltage will change to about 310~330V. If the bus voltage is significantly different from this value, to confirm whether the wiring of the module board is firm.

The relation of the input voltage and DC bus voltage when standby (DC bus voltage means the high voltage electrolytic capacitor voltage between two pins):

$$V_{DC} = V_{ACin} * 1.414$$

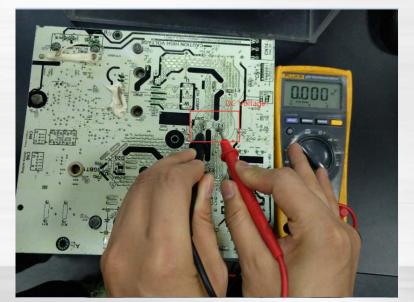




- Inverter compressor drive error
- P4 (PC 04)

Step 4. check the reactor wiring and resistance (between pins). The normal resistance should be around  $0.1\Omega$ .

Check the resistance between either pin and metal part of outdoor unit. It is supposed to be infinity.



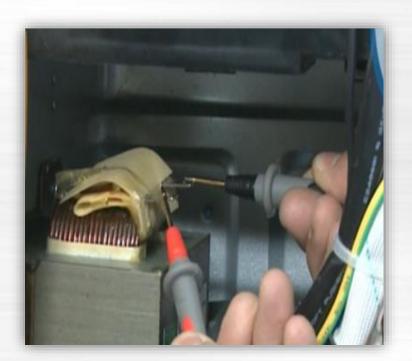



- Inverter compressor drive error
- P4 (PC 04)

Step 5. check the EEV wiring and resistance.





Red-yellow	Blue-yellow	Brown-white	Orange-white
47Ω	95Ω	47Ω	95Ω

- Inverter compressor drive error
- P4 (PC 04)

Step 6. check and make sure the liquid and gas valve are fully opened.

And measure system pressure and make sure the refrigerant is correct.



- Inverter compressor drive error
- P4 (PC 04)

Step 7. To check whether the compressor sleeve is brown. If yes, it is preliminarily judged as high temperature demagnetization of the compressor





- Inverter compressor drive error
- P4 (PC 04)

Step 8. To check the running frequency of compressor through the 88 LED on the board or the debugging tool. If the running frequency is Flash, it is preliminarily judged as high temperature

demagnetization of the compressor



#### **THANKS**

FOR YOUR ATTENTION